

Operating the Bosch SN85EX69CG dishwasher

Touch sensitive keys on Bosch Dishwasher

Tip: Take some time and get comfortable to play with the keys. Notice how sometimes there is a delay between the touch and the display changing. I found the touch seems to work more reliably when the other hand is touching the metal part of the door.

For our wash:

Switch on by touching the ON/Off touch pad on the left. The ECO wash comes on with its time (4:40) comes on the central display.

Then for a delayed start touch the “+” key and the display will change to show the timer symbol and the current delay until start. Use the + and – touch buttons to get the required delay.

Then touch the Start button and close the door.

The cheapest electricity is usually between 2-6 am

Design Notes: The touch controls are very poor – unresponsive with little or no tactile or auditory feedback. The manual is poor with no tutorial for a basic wash. The cost of each wash in kWh is not shown.

Would have been best to check out the HMI before buying.

The ECO wash is said to be “the most efficient” of water and electricity usage but it is not clear how that can be true with changing water and electricity prices and/or ecological damage per kWh.

MJD 07/07/2023